



QS1

INTELLIGENT SINGLE LOOP RELEASING CONTROL PANEL



P/N: See Chart

Standard Features

- Supports up to 250 Signature Series intelligent devices (125 detectors and 125 modules)
- Combines the Signature intelligent releasing module with Signature multisensor detectors for reliable suppression
- Failsafe mode ensures uncompromised reliability
- Class A (Style 7) or Class B (Style 4) wiring options
- Capacity for eight serial annunciators
- Four built-in system relays
- Three methods of programming: QuickStart “auto-learn,” front panel and personal computer (PC)
- Supports optional barcode scanner for direct device data entry
- Optional bank of 30 front panel switches with dual LEDs
- Up to 20 adjustable pre-alarm settings for Signature smoke detectors
- Large 14-line (224 character) backlit LCD display
- Four password levels, plus priority access keyswitch
- Message routing by event type or by individual message
- Alarm sensitivity by time of day or manual selection
- 1,000 event history buffer, plus alarm history counter
- 6 amp Power Supply, 4.75 amps available for external use
- Envoy graphics compatible
- Compare utility identifies system changes and simplifies testing

Overview

The QS1 releasing control panel brings big-system intelligent control to small applications. Designed for easy setup and simple installation, QuickStart lives up to its name in every respect. QS1’s exclusive QuickStart auto-learn function, and the option of configuring the panel using convenient front panel programming or from a PC, makes short work of system setup. Devices come on-line in no time as well, thanks to QS1’s built-in barcode scanner port. A simple pass of the optional scanner is all it takes to store device information in the QuickStart database. The scanner can also be used for quick and easy text entry when assembling custom messages.

QS1’s setup routine is deceptively simple, considering this system’s robust features. Supporting up to 125 intelligent detectors and 125 intelligent modules, QS1 takes full advantage of Signature Series technology, which provides electronic addressing, automatic device mapping, environmental compensation, and true multisensor detection.

QuickStart’s innovative design makes it easy to add extra auxiliary relays. Quick-Lok option cards snap onto QS1’s easily-accessible DIN mounting rails. QS1 also supports as many as eight remote annunciators and up to 30 programmable front panel switches with dual LEDs for system control and display.

QS1 is as simple to operate as it is to set up. Its large 14-line backlit LCD display provides easy-to-understand details concerning up to 1,000 system events, while bright system status LEDs and large, tactile control buttons present the user with a clean, crystal clear interface. Four password levels limit control and information retrieval to authorized personnel. A priority access keyswitch gives Level 2 access without a password to management and emergency personnel.



Application

Thanks to its flexibility and simple setup and operation, QS1 is ideal for new installations in power plants, telecom facilities, computer rooms, control rooms, art galleries, and record storage facilities.

The benefits brought by QS1 to retrofit applications underscores the true potential of this powerful system. As an intelligent panel, QS1 supports Signature Series devices, which can use existing wiring in most retrofit applications. This makes upgrading from a conventional system to analog control a simple operation with minimal disruption to normal operations at the site.

Which Quickstart Panel is right for you?	QS1	QS4
Signature Series devices supported	1 x 250	4 x 250
Conventional Class B circuits supported	0	3 x 16
Conventional Class A circuits supported	0	5 x 8
LCD display (lines x characters)	14 x 16	14 x 16
Optional Zone Switch/LEDs on front panel	1 x 30	2 x 30
Option card spaces	1	5 or 12
For more information, see Data Sheet...	DS1038	DS1037

CPU / LCD Display

The QS1 front panel display provides 14 lines by 16 characters of text detailing event, device, diagnostic, and programming information. Its large backlit LCD screen is easy to read and always provides at-a-glance indication of the system's state of operation.

The CPU/Display Unit houses the CPU card and mounting space for one optional LED/Switch card.




Display with two alarms shown

Specifications	
Control Panel	Standby Current: 199 mA
	Alarm Current: 235 mA
Remote Annunciator (Full control versions)	Standby Current: 154 mA
	Alarm Current: 166 mA
SBA Series	Standby Current: 70 mA
	Alarm Current: 90 mA
Operating Environment	Temperature: 32-120°F (0-49°C)
	Max. Humidity: 93% RH, non-condensing

Failsafe Mode


If the CPU loses communication with other circuit cards, the power supply card continues to monitor the system for any alarm events. If an alarm occurs on any device or circuit during a communications failure, the power supply activates all alarm outputs and instructs the dialer to transmit a default alarm message to the monitoring station.

Dimensions

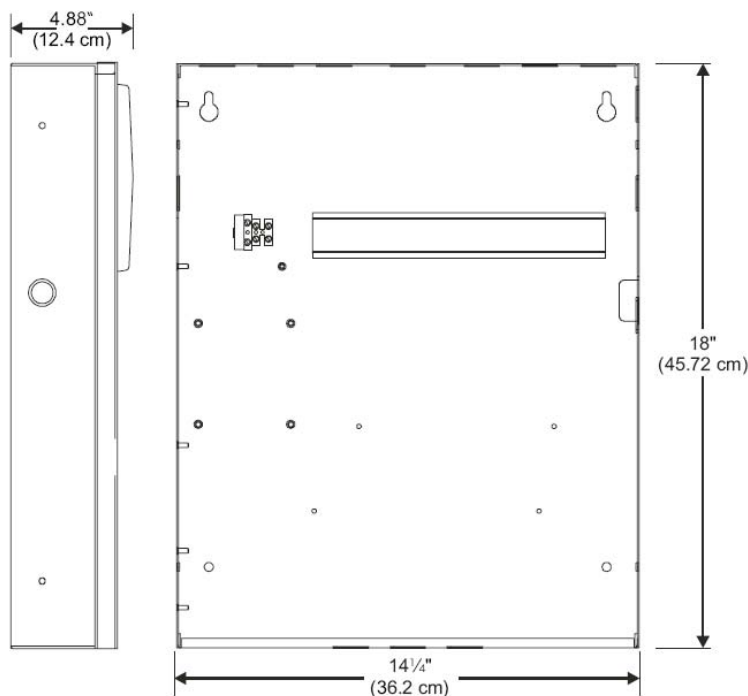

MIR-QS1-1-R-1 Enclosure

Surface Mounting

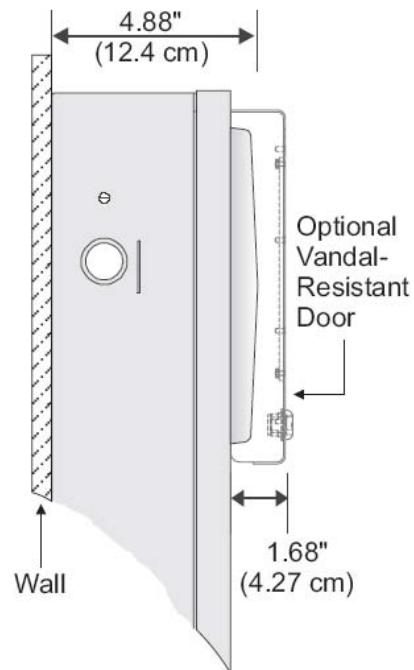

Remote Annunciators

QS1 supports up to eight remote annunciators, which provide mirrored or customized annunciation of front panel messages and status indicators. Two models are available: The QSA Series, and the SRA Series.


QS1 Annunciator

QS1 remote annunciators connect directly to the PS6 Power Supply Card or an external 24 VDC filtered supply. They are available with wallboxes for surface mounting. Annunciators are available with one annunciator option space for a display card with 30 dedicated switches and LEDs. See the Ordering Table for more information.




MIR-QS1-CPU-1 Annunciator
w/ QSA-1-S Enclosure

Class A Wiring

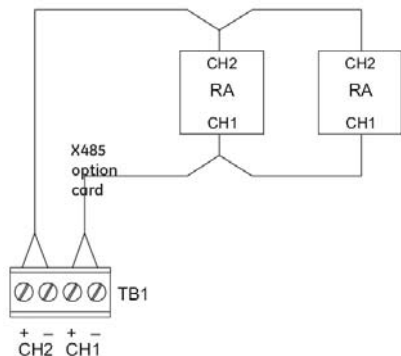

Class B Wiring

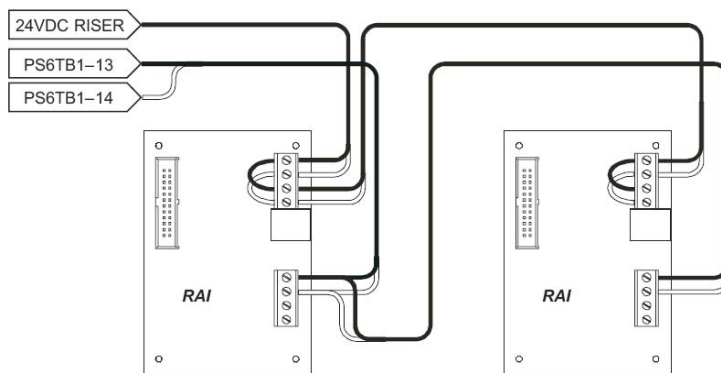

Model	Height	Width	Depth
QSA-1-S	7.6" (19.46 cm)	14.25" (36.20 cm)	2.9" (7.3 cm)






SRA Annunciator

The QuickStart SRA Remote Annunciator is a single-loop standalone unit that can be powered by the control panel or by an approved power supply. Annunciators support Class A or Class B connection to the system RS-485 data line, but do not provide ground fault isolation.

The SRA annunciator includes an RJ-12 modular jack to allow system database downloads from a laptop computer. Connection requires a programming cable (model number PROGCABLE-1, ordered separately). Annunciators are mounted to North American 2-gang or 4-inch square electrical boxes.

Mounting

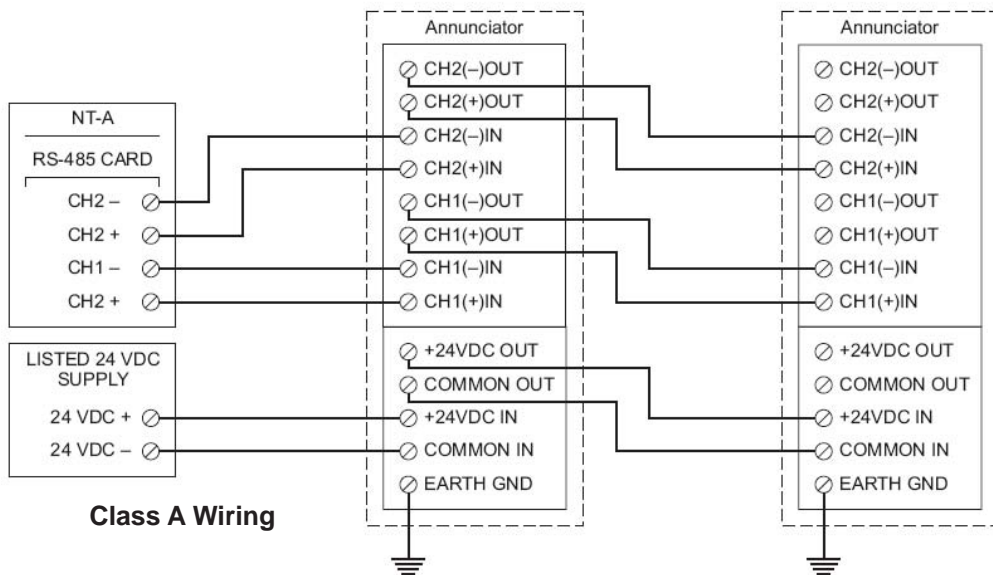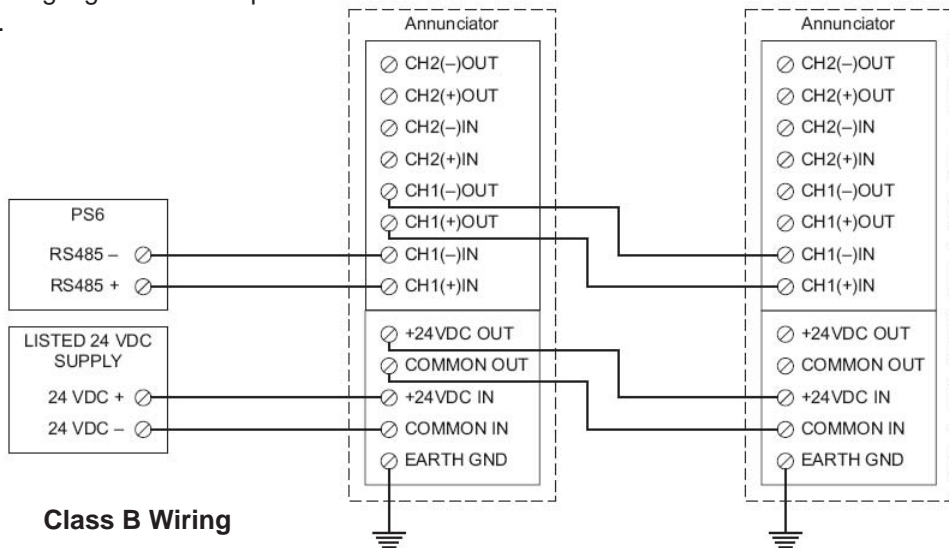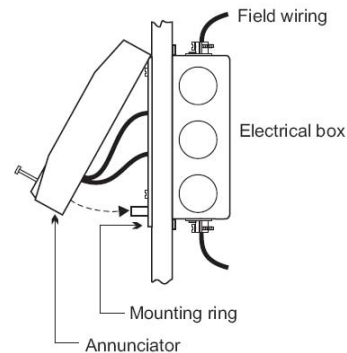


XGD Graphics Driver Card

The XGD Graphics Driver Card is an interface device that connects a QuickStart annunciator to an Envoy Graphic Annunciator. The XGD provides the electronics required to support 24 LEDs and 12 switches on the Envoy display panel. Multiple XGD cards can be chained together in one graphic annunciator cabinet to control larger displays. The QuickStart SRA Series annunciators can support a maximum of six XGD cards.




Operation

Indicators

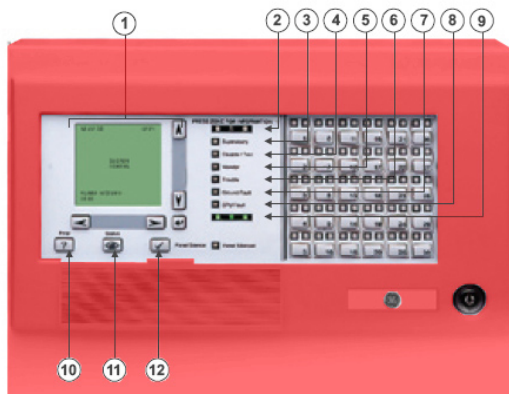

1. **Text display and controls:** Displays system messages, status information, and programming menus. Arrow buttons move the display cursor.
2. **Alarm LED:** Indicates a fire or life threatening emergency.
3. **Supervisory LED:** Indicates an off-normal condition with the fire suppression system or related equipment.
4. **Disable/Test LED:** Indicates part of the system is disabled or being tested. Disabled components also signal a system trouble.
5. **Monitor LED:** Indicates the operation of an ancillary system function (door closures, fan pressure switches).
6. **Trouble LED:** Indicates an off-normal condition or wiring fault that compromises the integrity of the system.
7. **Ground Fault LED:** Indicates a ground fault in the system wiring. Ground faults also signal a system trouble.
8. **CPU Fail LED:** Indicates an unexpected reboot or failure with the microprocessor. CPU failures also signal a system trouble.
9. **Power LED:** Indicates the panel has power.
10. **Help button:** Provides additional information about the device selected on the display.
11. **Status button:** Displays the Status Menu from which you can identify active or disabled points in the system.
12. **Panel Silence/Acknowledge button and LED:** Acknowledges all events posted in the display queues and turns off the panel buzzer. The panel silenced LED indicates that off normal events have been acknowledged.

Controls

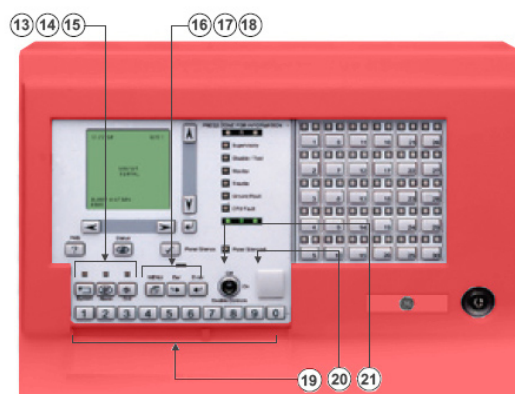


13. **Reset button:** Allows devices or zones in alarm or trouble to restore to their standby condition. The LED indicates that the panel is resetting.
14. **Alarm Silence button:** Turns active notification appliances off depending on panel programming. Pressing Alarm Silence a second time turns them back on. The LED indicates that the panel is in alarm and operating with notification appliances turned off.
15. **Drill button:** Activates notification appliances depending on panel programming but does not place the panel in alarm. The LED indicates that the panel is in Drill Mode.
16. **Menu button:** Displays the operator menus.
17. **Delete button:** Returns to the previous menu or backspaces the cursor.
18. **Enter button:** Press the Enter button to accept information or continue to the next item.
19. **Numeric keypad:** Numbered buttons for entering values and making menu selections.
20. **Barcode scanner jack:** Input for optional barcode scanner.
21. **Priority Access keyswitch:** Enables control functions reserved for access level 2 and above without requiring a password.



Typical Wiring

Class A Signature Data Circuit

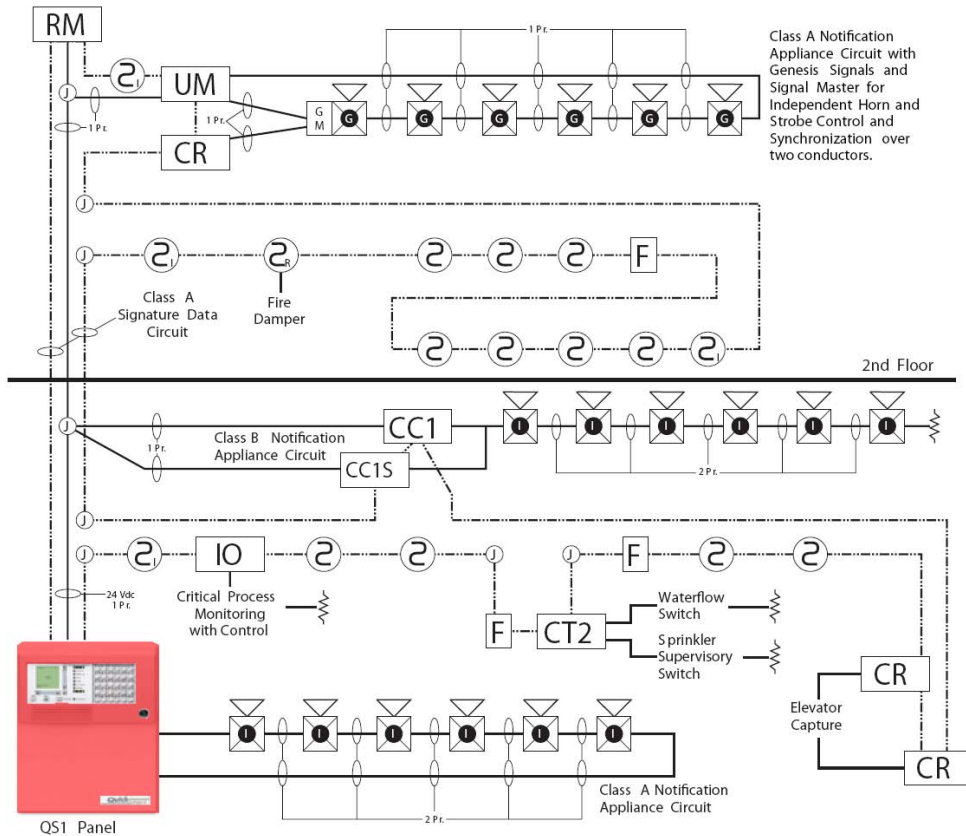


Class A Notification Appliance Circuit with Genesis Signals and Signal Master for Independent Horn and Strobe Control and Synchronization over two conductors.

LEGEND


	Enhanced Integrity Horn-Strobe		End-of-Line Resistor
	Genesis Horn-Strobe		Programmable I/O Module
	Genesis Signal Master		Universal I/O Module
	Smoke Detector		Dual Circuit Input Module
	2-Wire Smoke Detector		Control Relay Module
	Smoke Detector with Relay Base		Signal Module
	Smoke Detector with Isolator Base		Signal Module (synchronization)
	Manual Pull Station		Riser Monitor Module
	Junction Box		Single Circuit Input Module

More wiring suggestions can be found in the QS1 Technical Reference Manual, P/N 3100740

Class B Signature Data Circuit

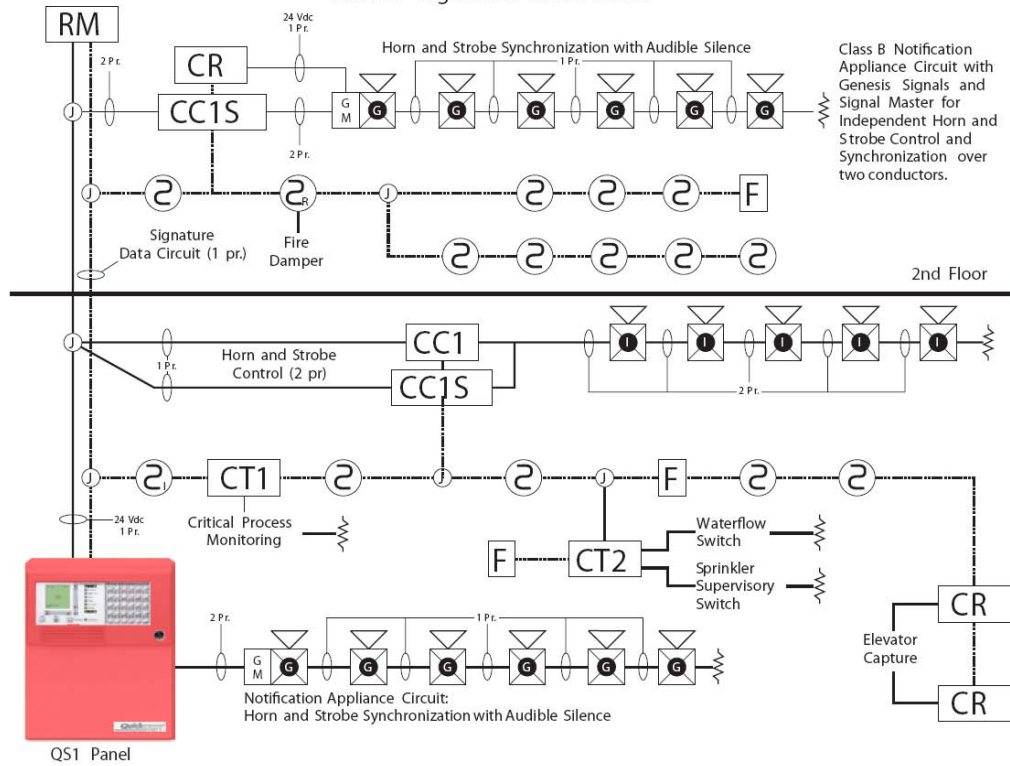

Fire Suppression

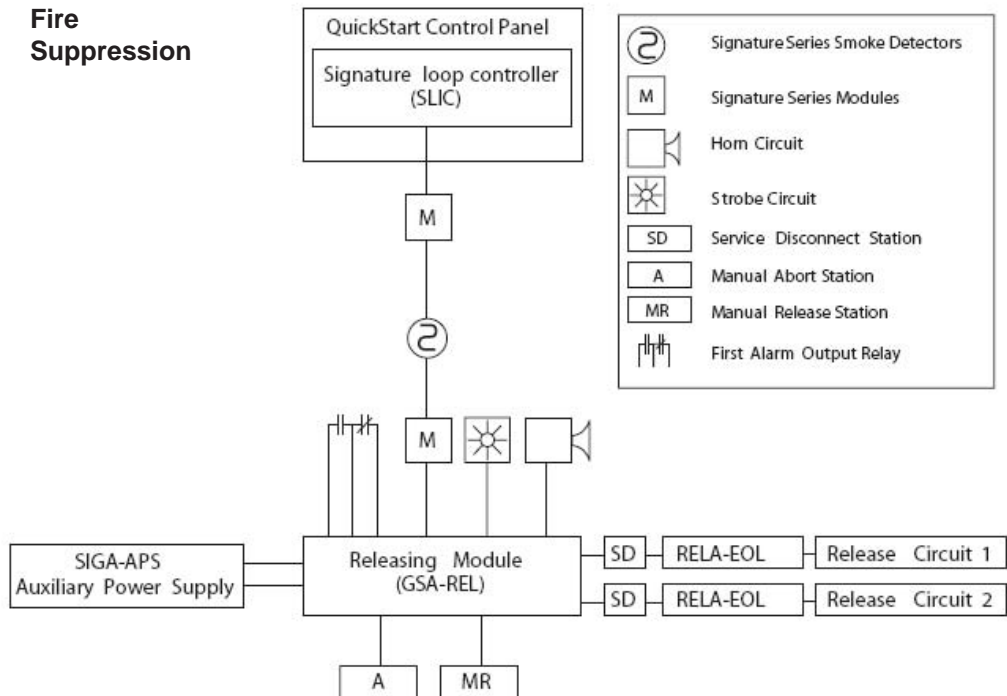



Standard Components and Option Cards

QS1 panels come standard with a CPU/Display Unit, a SLIC Signature Loop Controller, and a PS6 Power Supply (see ordering information for details).

Available QS1 option cards provide dialing capability or extra relays for ancillary control. Quick-Lok option cards snap onto DIN mounting rails for fast, no-fuss installation. One option card space is available.





Cabinet with option card and batteries installed.

PS6 Power Supply Card

Standard Component

Description

The PS6 provides primary DC power to all the circuit cards installed in the cabinet. There are four 24 VDC power output circuits – three for powering auxiliary applications, and one for powering four-wire smoke detectors – and a charging circuit for standby batteries. The PS6 also provides common alarm, supervisory, and trouble relays, as well as a fourth relay that is user programmable.

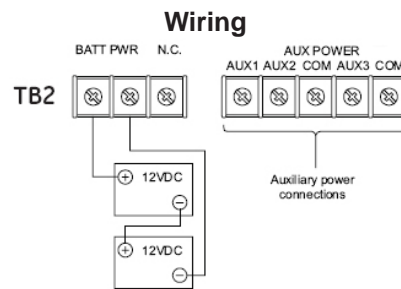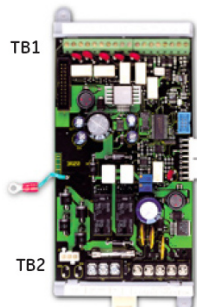


Relay 1: Form C. Contacts change position when the control panel processes an alarm signal and remain changed until all active alarm inputs restore and the control panel resets.

Relay 2: Form A. Contacts change position when the panel processes a supervisory signal and remains changed until all active supervisory inputs restore.

Relay 3: Form A. Contacts change position when the panel loses power or processes a trouble signal and remains changed until power returns or the trouble clears.

Relay 4: Form A. Relay closes and opens according to panel programming.

Smoke/Accessory Power: Jumper setting determines if the 24 VDC is constant or resettable.

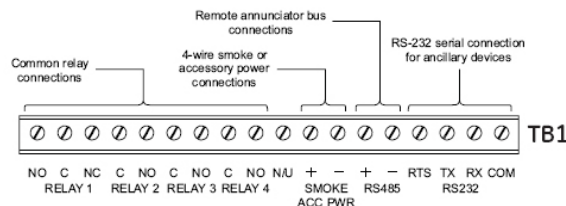

Specifications	
Main supply circuit	AC input: 115 VAC, 60 Hertz*
	DC input: 24 VDC batteries
Battery charging circuit	Charge current: 2 amps
	Charge capacity: 40 amp hours (UL) 30 amp hours (ULC)
Smoke/Accessory power output circuit	Voltage: 24 VDC, regulated Current: 250 mA Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
Auxiliary power output circuits	Quantity: 3
	Voltage: 24 VDC full wave rectified Current: 1.5 amps each
Common alarm relay	Style: Form C
	Contact rating: 1 amp Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
Trouble, Supervisory and programmable relays	Style: Form A (N/O)
	Contact rating: 1 amp Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
Operating Environment	Temperature: 32-120°F (0-49°C)
	Max. Humidity: 93% RH, non-condensing
Current requirements	Standby current: 72 mA Alarm current: 96 mA

* 220 VAC, 50 Hertz model available. See Ordering Information




SLIC Signature Loop Intelligent Controller

Option Card

Description

The SLIC provides one Class A or Class B data circuit (loop) for connecting Signature Series detectors and modules. The SLIC also provides two programmable Class A or Class B notification appliance circuits (NACs) for connecting polarized 24 VDC notification appliances such as horns and strobes. QS1 supports one SLIC.

Signaling Line Circuit and NACs are supervised and power-limited.

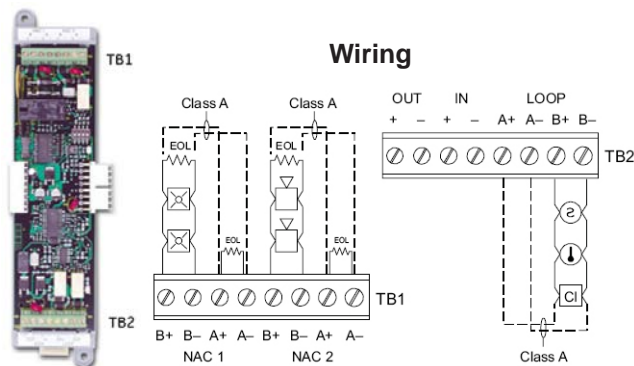

Specifications


Signaling line circuit	Configuration: Class B (Style 4) or Class A (Style 7)
	Capacity: 125 Signature detectors 125 Signature modules
	Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
	Circuit resistance: 65 ohms Circuit capacitance: 0.3 μf
Notification appliance circuits #1 and # 2	Configuration: Class B or Class A
	Output voltage: 24 VDC, nominal
	Output current: 2.0 A at 24 VDC for #1 and 0.8 A at 24 VDC for #2
NAC power input circuit	Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
	End of line resistor: 10 kOhms, ½ W
Operating environment	Voltage: 24 VDC, nominal
	Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
Current requirements	Temperature: 32-120°F (0-49°C)
	Max. Humidity: 93% RH, non-condensing
Card spaces	Standby current: 33 mA
	Alarm current: 57 mA (Both NACs on)
	Requires one card space.

SL30, SL20L5S, SL30L LED/Switch Cards

Option Cards

Description

The SL30 provides thirty circuits for zone annunciation. Each circuit comprises two LEDs and a push button switch. The **SL30** push button switches are numbered from 1 to 30. The **SL20L5S** provides 20 circuits for point annunciation and five circuits for custom control functions. The **SL30L** provides 30 circuits for point annunciation. SL20L5S and SL30L circuits are labeled using inserts provided with the cards.

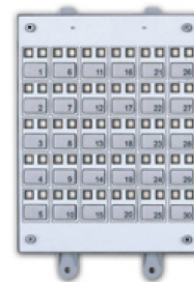

Specifications

Operating environment	Temperature: 32-120°F (0-49°C)
	Max. Humidity: 93% RH, non-condensing
Current requirements	Standby: 1 mA Alarm: 0.75 mA per active LED





ZR8 Relay Card

Option Card

Description

The ZR8 provides eight dry-contact relays that can be independently configured as Form A or Form B relays. It occupies one card space on the chassis rail.

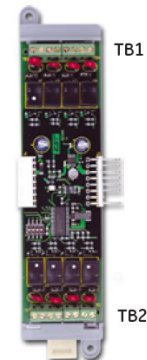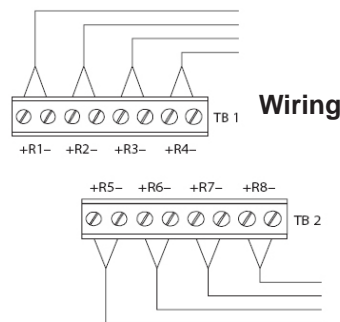

Specifications


Output relays	Style: Form A (N/O) or Form B (N/C) (jumper configurable) Contact rating: 1 amp @ 30 VDC resistive Wire size: 18 to 12 AWG (0.75 to 2.5 mm ²)
Operating environment	Temperature: 32-120°F (0-49°C) Max. Humidity: 93% RH, non-condensing
Current requirements	Standby: 11 mA Alarm: 18 mA per active relay
Card spaces	Requires one card space.

X485 Class A RS-485 Card and QS-232 Port

Option Cards

Description

The NT-A, which includes the X485/RS-485 card and QS-232/UART port, provides one Class A serial remote annunciator bus for connecting remote annunciator panels. Control panels require the X485 card and QS-232 port, which also serves as a laptop or printer port. The X485 occupies one card space on the chassis rail. The QS-232 port plugs into the panel CPU.

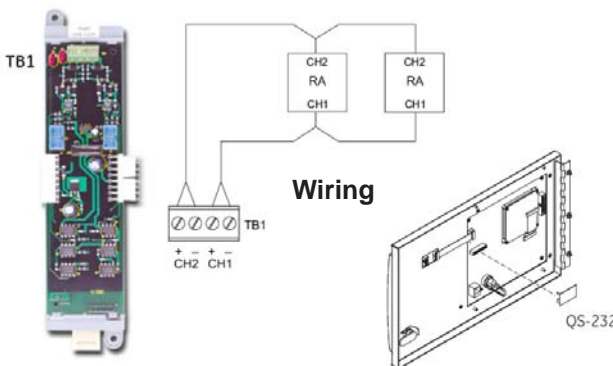

Specifications

Wire size	18 to 12 AWG (0.75 to 2.5 mm ²) twisted pair (6 twists per foot minimum)
Circuit resistance	100 ohms
Circuit capacitance	0.4 μF
Operating environment	Temperature: 32-120°F (0-49°C) Max. Humidity: 93% RH, non-condensing
Current requirements	Standby: 60 mA Alarm: 60 mA
Card spaces	Requires one card for the NT-A



Ordering Information

Model	P/N	Description	Ship Wt. lb (kg)
-------	-----	-------------	---------------------

Basic Package - Enclosure, SLIC, Power Supply, CPU and Display...

MIR-QS1-1-R-1	18819	Single Loop System. 1 option card space. Red enclosure, 115 VAC transformer.	17.0 (7.7)
MIR-QS1-1-G-2	99280	Single Loop System. 1 option card space. Grey enclosure, 230 VAC transformer.	17.0 (7.7)

Note: SLIC Card includes One Signature Loop Intelligent Controller for up to 250 devices and one Class A or two Class B NACs.

Enclosure Accessories

QS-1-VR-R	18821	Vandal-resistant cabinet door, red	3.0 (1.4)
TRIM-1R	18822	Trim Kit - red	5.0 (2.3)

Option Cards

ZR8	18832	Relay Card. 8 programmable Form A contacts.	1.0 (0.5)
-----	-------	---	-----------

Display Options

SL30	18970	Annunciator module. Numbered 1 to 30. Two LEDs and one switch per zone.	1.0 (0.5)
SL20L5S	18973	Annunciator module. 20 circuits for point or zone annunciation, 5 circuits for custom functions. Circuits labeled with insert card.	1.0 (0.5)
SL30L	18972	Annunciator module. 30 circuits. Circuits labeled with insert card.	1.0 (0.5)
MIR-QS1-CPU-1	18820	Single Loop CPU/Display. One annunciator option space.	4.0 (1.8)
MIR-SRA1	18828	Intelligent/Conventional CPU/Display with integrated LCD and control switches. 4" square box mount.	4.0 (1.8)
NT-A	18974	RS-485 option card. Required for Class A remote annunciation. Includes UART card.	1.0 (0.5)
QS-232	18975	UART option card. Plugs into CPU. Required for PC Programming / printer port. Included in NT-A package.	1.0 (0.5)

Remote Annunciator Cabinets (c/w Interface Assembly; Require CPU/Display...)

QSA-1-S	18976	Surface Remote Annunciator Cabinet. Space for one SL30 display card.	4.0 (1.8)
QSA-1-S-VR	18978	Surface Annunciator Cabinet. Vandal resistant. Space for one SL30 display card.	4.0 (1.8)

Programming Tools

MIR-QS-CU	18836	QuickStart Panel Configuration Utility.	1.0 (0.5)
QS-SCAN	18838	QuickStart scanner w/ programming guide.	2.0 (0.9)
Prog cable-1	18837	Scanner port upload/download cable.	1.0 (0.5)



Model	P/N	Description	Ship Wt. lb (kg)
Accessories			
MIR-PRT/S	18980	System Printer - Desk top Style	14.0 (6.4)
BC-1R	18839	Battery Cabinet. Room for two 40 Ah or two 24 Ah batteries.	50.0 (22.7)
MFC-A	18690	MultiFunction Cabinet.	7.0 (3.2)
IOP3A	18981	RS-232 Isolator Module.	3.0 (1.4)
MIRBPS6A	18982	6.5 Amp Booster Power Supply, 110 V	13.0 (5.9)
MIRBPS10A	18844	10 Amp Booster Power Supply, 110 V	13.0 (5.9)
Spare Parts			
n/a	99802	Transformer Extension Cable	0.3 (0.1)
n/a	99953	120 VAC Transformer	6.9 (3.1)
PS6	99954	Power Supply Module	1.6 (0.7)

Note: Approvals/Listings maintained by and manufactured by Edwards

The seller makes no warranties, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, except as expressly stated in the seller's sales contract or sales acknowledgment form. Every attempt is made to keep our product information up-to-date and accurate. All specific applications cannot be covered, nor can all requirements be anticipated. All specifications are subject to change without notice.



1102 Rucpich Drive
 Millennium Park
 Crown Point, IN 46307
 TEL: (219) 663-1600 FAX: (219) 663-4562
 e-mail: info@janusfiresystems.com
www.janusfiresystems.com