



VRT SERIES

AIR SAMPLING REMOTE DISPLAYS



ActivFire VdS LPCB

P/N: See Chart

Standard Features

- Provides Immediate Status Reporting for a Single VESDA® Zone
- Allows Zone Control of Assigned VESDA Detector
- High Intensity Alarm LEDs
- Remote Relay Option
- 20-Segment Vertical Bar Graph Display
- Alarm Threshold Indicators
- Built-In Sounder for Audible Warning
- Comprehensive Fault Reporting
- Multi-mode Numeric Display (defaults to smoke obscuration)
- Recessed Mounting Option

Overview

The VRT Series Remote Displays provide real-time indication of the status of a VESDA detector. They have a 20-segment vertical bar graph display, a 2 digit numeric display, an audible sounder, clear alarm and fault indicators. They also have 4 push button keys to control the detector and the mode of the display. Several displays can be configured to display information from a single detector in multiple locations.

Description

There are various versions of the display module depending on the type of detector and the relay configuration required. The LaserSCANNER display has a fourth mode for the Numerical Display which shows the First Alarm Sector (FAS), this being the number of the sector (pipe) that has detected smoke. For the LaserCOMPACT the Fire 2 LED is omitted.

Smoke Indication

Smoke levels are continuously shown on a bar graph display where each illuminated segment indicates the current level of detected smoke.

The top segment of the bar graph indicates the Fire 1 smoke threshold level and each segment below that level represents 1/20 of the Fire 1 smoke threshold level.

To the left of the bar graph are the Fire 1, Action and Alert smoke threshold indicators. At a glance these provide a visual representation of the programmable alarm thresholds showing how close the smoke level is to triggering the next level of alarm.

Description

High intensity flashing LEDs provide a clear indication of the fire condition and are accompanied by an audible warning appropriate to the alarm condition. Similarly, any fault condition is indicated by a series of LEDs and an audible tone providing a comprehensive range of status information. The audible warning is easily silenced by pressing the Silence button at which point any flashing LEDs are illuminated until the cause of the event is identified, rectified and the system reset.




Push Button Keys

Four large tactile push button keys enable users to reset, isolate or silence the detector and control the mode of the display module. The buttons can be disabled to prevent operation of its functions.

A lamp test routine is initiated by pressing the Mode key for two seconds. A Manual Scan can be initiated on the VLS LaserSCANNER by holding the Silence button for 2 seconds.

Display Module

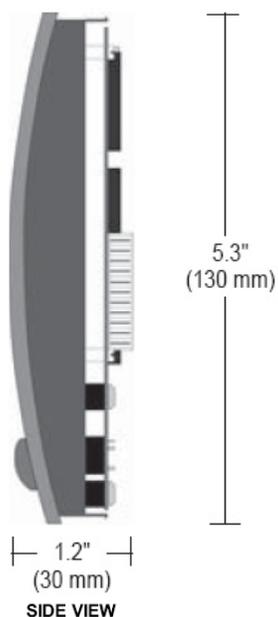


Numeric Display

A 2 digit numerical readout has a number of modes that are indicated by up to four LEDs:



- The current smoke level in % obscuration/ft (% obscuration/m)
- Fire 1 threshold in % obscuration/ft (% obscuration/m). This is the sensitivity of the detector.
- The VESDA zone number
- First Alarm Sector on the VLS display - the numeric readout shows the sector (pipe) number that has detected smoke.



Remote Mounting Box

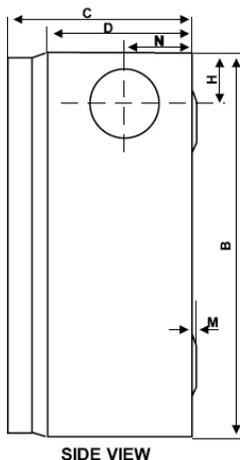

Dimensions		
	in	mm
A	5.5	140
B	5.9	150
C	2.75	70
D	2.36	60
E	1.75	44.5
F	1.9	48
G	0.9	23
H	0.98	25
I	1.1	27.5
J	0.65	16.5
K	0.98	25
L	0.25	6.4
M	0.06	1.6
N	0.91	23
O	1.0	26

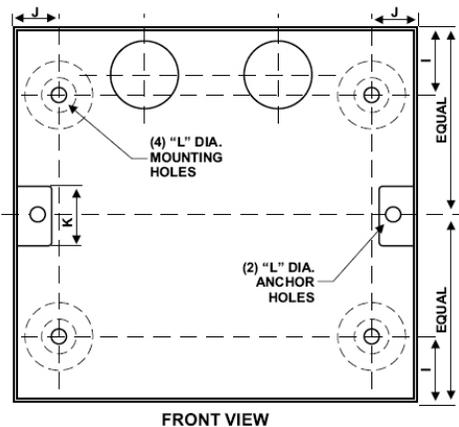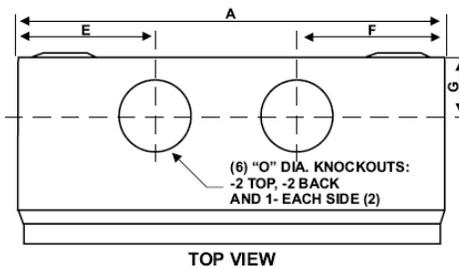



Specifications

Supply Voltage:	18 to 30 VDC	
Power Consumption @ 24 VDC:	Quiescent	With Alarm
Power	2.4 W	3.0 W
Current	90 mA	110 mA
Dimensions (WHD):	5.5 in x 5.9 in x 3.4 in (140 mm x 150 mm x 85 mm)	
Operating Temperature:	32° to 103°F (0° to 39°C)	
Humidity:	10-99% RH non-condensing	
Alarm Indicators:	High Intensity LEDs with 70 degree viewing angle (Mode/Test, Silence/Scan, Reset, Isolate)	
Push Buttons Keys:	Can be disabled during commissioning (except Silence). A pressed key gives a short tone when enabled and a long tone when disabled.	
Mode/Test (Dual Function):	<p><i>Short press:</i> Selects modes on the numeric display: Sensitivity, Smoke Level, and Zone Number. For LaserSCANNER displays, the First sector/pipe in alarm can be selected. Note: The current mode is indicated by the appropriate LEDs.</p> <p><i>Long press:</i> Activates the Test Mode (Dual function on SCANNER only)</p>	
Silence (Silence/Scan):	<p><i>Short press:</i> Silences any alarm or fault warnings. Flashing LEDs are permanently lit until the event is cleared and the system reset. Only affects the local display.</p> <p><i>Long press:</i> Initiates the scanning of each pipe individually for smoke and displays the current levels.</p>	
Reset:	Resets all the alarms and faults on the detector and its associated displays. If the alarm or fault condition has not been cleared then the appropriate fault indications will be repeated. Reset does not clear the isolate mode.	
Isolate:	Isolates the detector from any external devices or systems. This includes all the relays in the detector and in remote units. Isolate relay is activated while the detector is in isolate mode	
Fault Indicators:	<p><i>System:</i> A fault that affects the whole VESDA system (any devices connected on VESDAnet)</p> <p><i>Zone:</i> A fault that affects only the assigned VESDA detector and its associated displays.</p> <p><i>Urgent:</i> A serious fault that requires immediate attention. This light will only illuminate when at least one other fault light is lit.</p> <p><i>Power:</i> A fault with either the mains AC or battery backup power supply.</p> <p><i>Network:</i> A failure in the VESDAnet communications link.</p> <p><i>Airflow:</i> Airflow drift. Urgent indicates serious aspirator or pipe failure.</p> <p><i>Filter:</i> Filter needs replacing. Urgent indicates that filter replacement is overdue.</p>	



Ordering Information

Model	P/N	Description	Ship Wt. lb (kg)
VRT-200	19088	Remote Display (LaserPLUS, 7 Relays, w/ Mounting Box)	1.5 (0.7)
VRT-V00	19089	Remote Display (LaserFOCUS, 7 Relays, w/ Mounting Box)	1.5 (0.7)
VRT-800	19090	Remote Display (LaserSCANNER, 12 Relays, w/ Mounting Box)	1.5 (0.7)
VSP-012	19092	Recessed Mounting Kit	0.5 (0.2)

Note: Approvals/Listings maintained by and manufactured by Xtralis AG.

The seller makes no warranties, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, except as expressly stated in the seller's sales contract or sales acknowledgment form. Every attempt is made to keep our product information up-to-date and accurate. All specific applications cannot be covered, nor can all requirements be anticipated. All specifications are subject to change without notice.



1102 Rupcich Drive
Crown Point, IN 46307
TEL: (219) 663-1600 FAX: (219) 663-4562
e-mail: info@janusfiresystems.com
www.janusfiresystems.com